

ML4064-MCB-112-SMPS-E

Technical Reference

MSA Compliant OSFP MCB

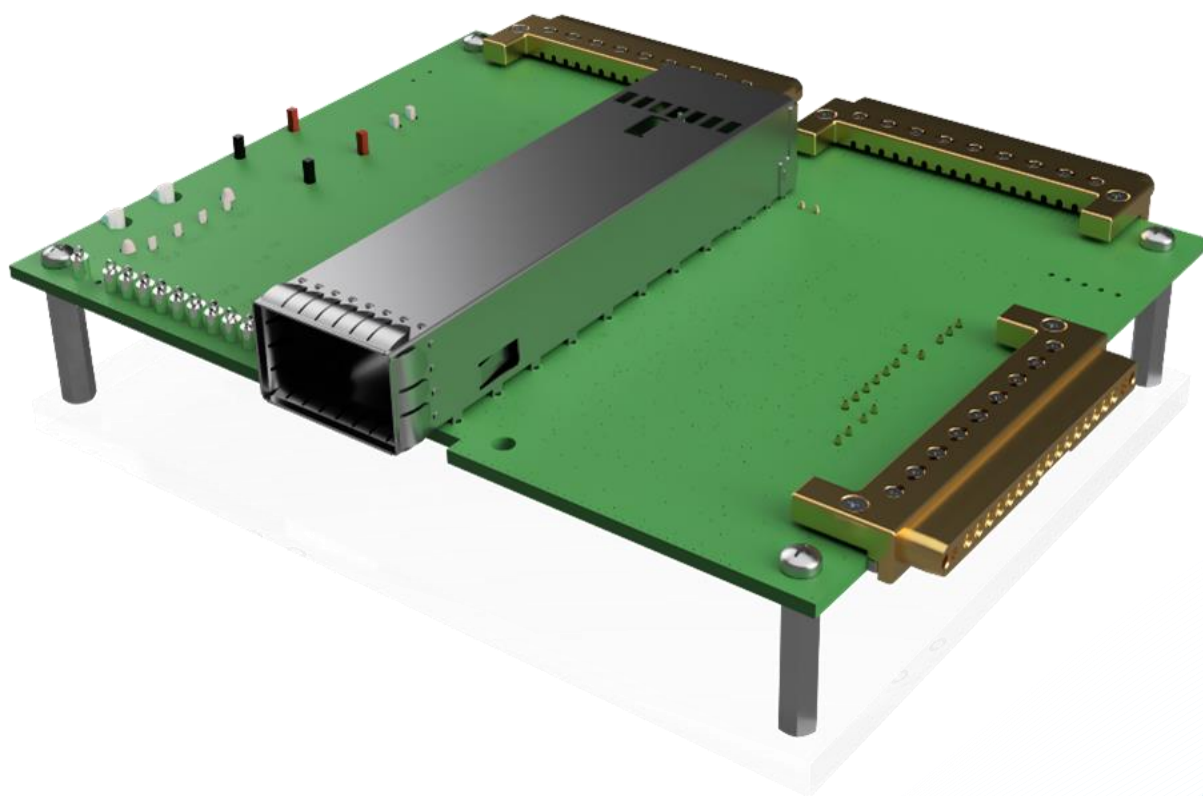


Table of Contents

1. Introduction 3

2. Key Features 3

3. ML4064-MCB-112-SMPS-E Hardware 3

 3.1 Power-Up 3

 3.2 Operating Conditions 4

 3.3 LED Indicators..... 4

 3.4 Low Speed Signals 5

 3.4.1 External I2C 5

4. ML4064-MCB-112-SMPS-E Software 5

 4.1 USB Driver 5

 4.2 GUI 5

5. Hardware Revision..... 6

6. Firmware Revision 6

7. Bootloader..... 6

Table of Figures

Figure 1: Power Connectors 3

Figure 2: On-board LEDs..... 4

Figure 3: External I2C 5

1. Introduction

The ML4064-MCB-112-SMPS-E is designed to provide an efficient and easy method of programming and testing 800G OSFP transceivers and active optical cables. It includes a complete user-friendly GUI supporting all features defined by OSFP MSA and simplifying configuration processes to enable intuitive memory map programming and testing. It is designed to simulate an ideal environment for OSFP transceivers module testing, characterization and manufacturing.

2. Key Features

- ✓ OSFP 800G MCB
- ✓ Low insertion loss
- ✓ Power pins and low speed signals are accessible via pin headers
- ✓ Ability to drive I2C from external pin headers, or connect I2C packet analyzer
- ✓ High performance SMPS connectors up to 110GHz
- ✓ User friendly GUI for I2C R/W commands and loading custom MSA memory maps

3. ML4064-MCB-112-SMPS-E Hardware

The subsequent sections cover the essential parts in the hardware, for board operation and testing.

3.1 Power-Up

To power up the ML4064-MCB-112-SMPS-E host, steps are as follow:

- The host TOP is where the cage is mounted
- Two options are available to power up the board:
 - Using the four pins power connector (J12) that should be connected to 12V taking into account pins distribution, where SMT jumper U28 must be populated
 - Using the banana plug (U27) that should be connected to 3.3V where SMT jumper U29 must be populated
- Connect the host to your PC using a Type-B mini to Type-A USB cable.

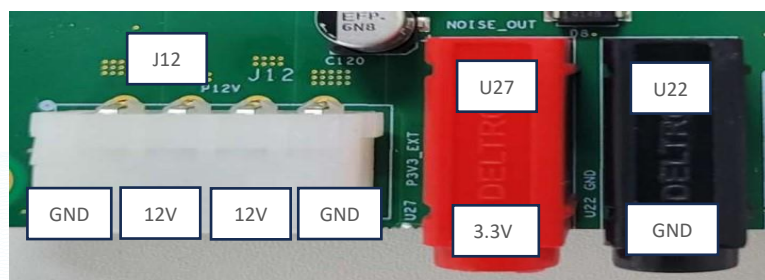


Figure 1: Power Connectors

3.2 Operating Conditions

According to the powering method described in section 3.1, the input voltage supply must follow the table below.

Parameter	Symbol	Condition	Min	Typical	Max	Unit
+12	P12V	Supply from J12 (P12V pin)	-	12	-	V
+3.3	P3V3	Supply from J2 (P3V3 Pin) OR banana plug U27	3.0	3.3	3.6	

Table 1: Voltage Operating Conditions

3.3 LED Indicators

The ML4064-MCB-112-SMPS-E includes on-board LEDs, for quick debugging and monitoring purposes. LEDs are summarized below:

- LED D11 indicates whether a USB cable is plugged or not.
- LEDs D14 and D15, colored green and red, respectively, are used for diagnostic purposes:
 - ✓ If D14 is on: USB is locked and device is recognized by the USB driver
 - ✓ If D15 is on: USB is not connected or USB driver is not found
 - ✓ If both are off: board is not powered correctly or firmware is corrupted
 - ✓ If both are blinking: the board is in Bootloader mode
- LEDs D2 – D3 – D4 – D5: Should be ON to indicate a good operation of the noise generation circuit power regulators.

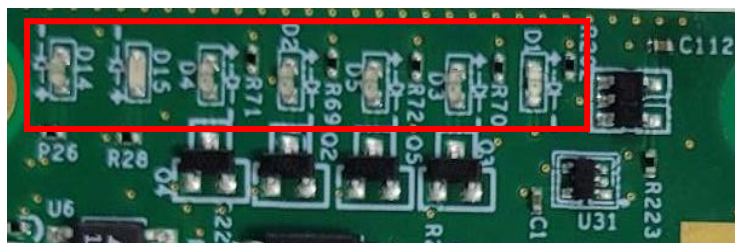


Figure 2: On-board LEDs

3.4 Low Speed Signals

3.4.1 External I2C

The I2C bus can be accessed externally using U5 pins. In this case a jumper should be placed on pin header P3 (HW_I2C) shown in the image below.

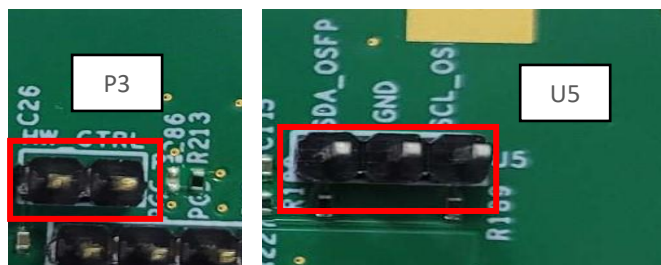


Figure 3: External I2C

4. ML4064-MCB-112-SMPS-E Software

The ML4064-MCB-112-SMPS-E is accessible and controlled through application software. This software is MSA compliant and provides a user-friendly interface to operate the board and access all its features. The communication between the ML4064-MCB-112-SMPS-E board and the software is established through USB connection.

4.1 USB Driver

In order to be able to communicate with the board, user need to install the USB driver of the ML4064-TR-MCB. This is available on the website under the following link (USB Driver icon):

<https://www.multilaneinc.com/product.php?pn=ML4064-MCB-112-SMPS-E>

Below is a brief guide on how to install the USB Driver:

- Power up the board
- Connect the board to the PC through USB cable
- Download the USB driver file
- Go to "Device Manager"
- Find the target device that need to install the driver
- Right-click on the device and select Update Driver Software
- Select Browse my computer for driver software
- Browse you PC and select the driver file
- Click Next and wait until the driver is installed

4.2 GUI

For GUI installation and operation, refer to the link below. GUI user manual is available for detailed description (CMIS GUI Manual icon).

<https://www.multilaneinc.com/product.php?pn=ML4064-MCB-112-SMPS-E>

5. Hardware Revision

- **ML4064-MCB-SMPS-REVA1:** Initial Version

6. Firmware Revision

- **ML4064_MCB_SMPS_V1_0:** latest FW revision

7. Bootloader

Accessing in bootloader mode allows the user to reprogram the microcontroller, this is done as described below:

1. Connect a jumper on (P1) situated close to the microcontroller.
2. Connect a USB cable between the PC and Board.
3. Power up the board with a +3.3V supply.
4. LEDs (D13, D14) start blinking.
5. Remove jumper.
6. Open the software "Microchip USB HID Bootloader v2.3".
7. Click on "Open Hex File".
8. Choose the new FW to download.
9. Click on "Program/Verify".
10. Once the software finishes programming press on "Reset Device".
11. After reset the Firmware is successfully updated.

Revision History

Date	Revision	Description
4/28/2025	0.1	▪ Initial Version
7/22/2025	0.2	▪ Fixing the Table of Figures

North America

48521 Warm Springs Blvd. Suite 310
Fremont, CA 94539
USA
+1 510 573 6388

Worldwide

Houmal Technology Park
Askarieh Main Road
Houmal, Lebanon
+961 5 941 668

Asia

14F-5/ Rm.5, 14F., No 295
Sec.2, Guangfu Rd. East Dist.,
Hsinchu City 300, Taiwan (R.O.C)
+886 3 5744 591